

#### OTHER ARTICLES IN THE ANALOG LIGHTNING-FAMILY:

##### Need to add more external lights to Analog Lightning?

Auxiliary DT-cable (65-3025-DT)

##### Additional adaptercables

Adapter DT 1x2-pole to 1x3-pole (65-DT1213)

Adapter DT 1x2-pole to 1x4-pole (65-DT1214)

Adapter DT 1x2-pole to 2x2-pole (65-DT1222)

Adapter DT 1x2-pole to 2x3-pole (65-DT1223)

Adapter DT 1x2-pole to 2x4-pole (65-DT1224)

Adapter DT 1x2-pole to 1x2-pole Superseal (65-DT12SS12)

##### Complete kits

Analog Lightning 3025 Minus (65-3025M)

Analog Lightning 3025 Plus (65-3025P)

Analog Lightning Reverse 2025 Plus (65-2025P)

##### Spare parts

Electronic controller EB3025 MINUS (65-3025 MINUS)

Electronic controller EB3025 PLUS (65-3025 PLUS)

Electronic controller EB2025 PLUS (SSPS25A)

#### Modernum AB

##### visiting/postal address:

Johanneslundsvägen 12, SE-194 61 Upplands Väsby

**telephone:** +46 8 626 95 00

**e-mail:** info@modernum.se

**web:** www.modernum.se



## Analog Lightning 3025

**A professional kit designed for cars with analog controlled headlights. The Analog Lightning 3025-kit includes an electronic controller together with fused cablings with a DT-connector for an easy connection to a LED light bar or other external lights.**

#### Articles:

Analog Lightning 3025 Plus (for analog plus-signals)

Analog Lightning 3025 Minus (for analog minus-signals)

#### Technical data:

Rated voltage: 12/24VDC

Output current: 13A (25A without DT-contact)

Current consumption: 2mA

Ambient operating temp.: -40°C to +85°C

Electronic overheat protection: +150°C

**Note:** Analog Lightning comes in two versions; Plus and Minus (analog signal in). Please make sure that you choose the correct version for your vehicle before you start the installation.

\* Screw not included

- Terminals on the electronics:
1. + OUT
  2. + OUT
  3. + OUT
  4. + IN 12/24V
  5. + IN 12/24V
  6. - GROUND
  7. ANALOG SIGNAL IN



Note!!!  
Mounting direction



Support:  
+46 8 626 95 00  
info@modernum.se

